


Drilling Pattern for MEIDJO 3.0 & 2.1 Binding.

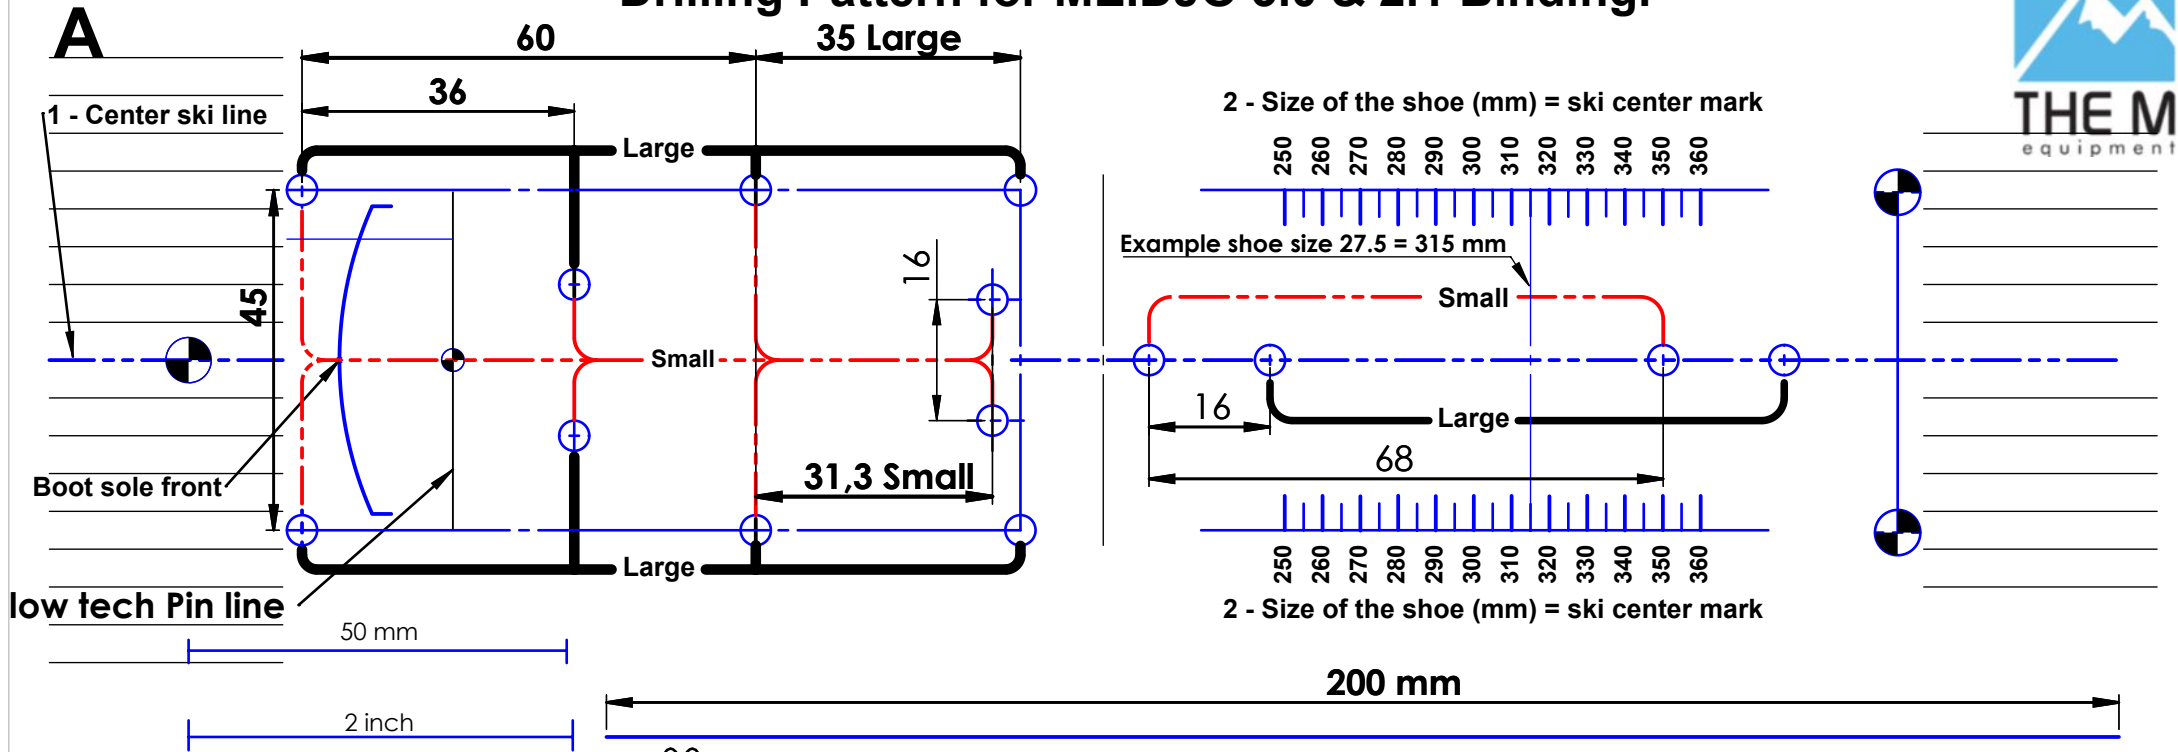

MEIDJO Binding


Instruction

If you print the drilling pattern - print it with no scale and check if the 200 mm line is correct.

Cut the drilling pattern along the line _____
 You have now 2 drilling patterns A and B.
 Check the size of your boot and the ski mark center.

1. Place the pattern A on the center ski line of your ski
2. Align the scale '2' onto the ski center mark
3. Place the pattern B and align the scale 3 onto Ski center mark
4. Check with your boot (Boot sole front and back & shoe center)
5. Drill the 13 holes with a $\varnothing 3,6$ mm and 9 mm length drill.
6. Clean the holes
7. Fix your binding

3 - Size of the shoe (mm) = ski center mark



Example shoe size 27.5 = 315 mm



3 - Size of the shoe (mm) = ski center mark

B

